

POWER TEMP II

SOLID STATE POWER CONTROLLER


PMTR: PARAMETER
Press to enter/change parameters

UP/DOWN:
Use to adjust power set point or parameters

POWER: Turns controller on/off

AMPS/ENTER:

Press to view amps/current

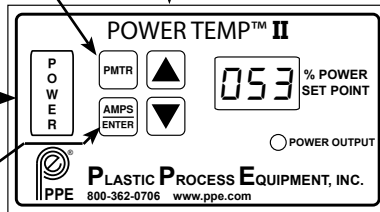


POWER OUTPUT LED: Controller is outputting power when lit.

120VAC
OUTLET
PT1215



240VAC
OUTLET
PT2415

GBB-15 OUTPUT FUSE. VERY FAST ACTING. **ONLY REPLACE WITH GBB-15 OR EQUIVALANT**

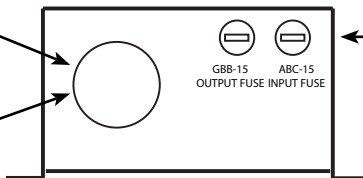

ABC-15 INPUT FUSE. FAST ACTING. **ONLY REPLACE WITH ABC-15 OR EQUIVALANT**

Press PMTR to access the parameters. Display will show the parameter number (ie P01), then show the current setting in 2 second intervals. Adjust the parameters using the up/down buttons. Once finished, press PMTR repeating until display is showing SET POINT again. You will hear the piezo beep twice to indicate a save.

PARAMETER:

P01: OUTPUT MODE TYPE

BST: BURST MODE

HLF: HALF WAVE

FLI: FULL WAVE

PHS: PHASE CONTROL

P02: OVER CURRENT LIMIT

1-16 AMPS

P03: FREQUENCY (DISPLAY ONLY)

ERRORS: PIEZO alarm will sound when an error has been detected.

HIA - Controller has exceeded the amperage set in the parameters (P02).

To clear the error, user must turn off, then turn the controller on again.



PLASTIC PROCESS EQUIPMENT, INC.

www.ppe.com • e-mail: sales@ppe.com

PPE
WEST

6385 Montessouri Street, Las Vegas, Nevada 89113
702-433-6385 • 800-258-8877 • Fax: 702-433-6388

PPE
SOUTH

11218 Challenger Avenue, Odessa, Florida 33556
727-834-8888 • 800-282-6783 • Fax: 727-834-8873

PPE

8303 CORPORATE PARK DRIVE, MACEDONIA (Cleveland), OHIO 44056, U.S.A.
216-367-7000 • Toll Free: 800-321-0562 • Fax: 216-367-7022 • Order Fax: 800-223-8305

Toll Free: USA, Canada & Mexico

800-362-0706