

HOT TIP SPRUE CLEANER - PORTABLE
— INSTRUCTIONS —

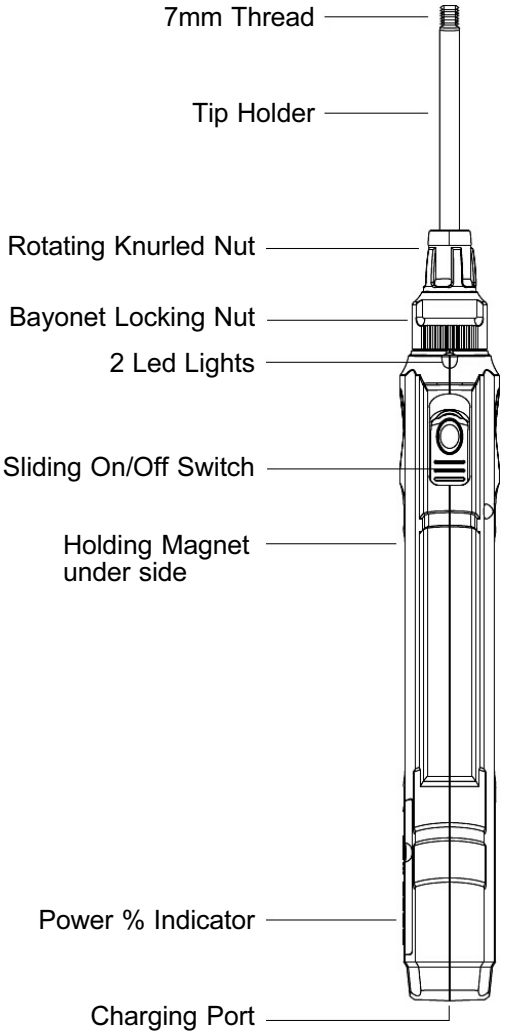

TIPS

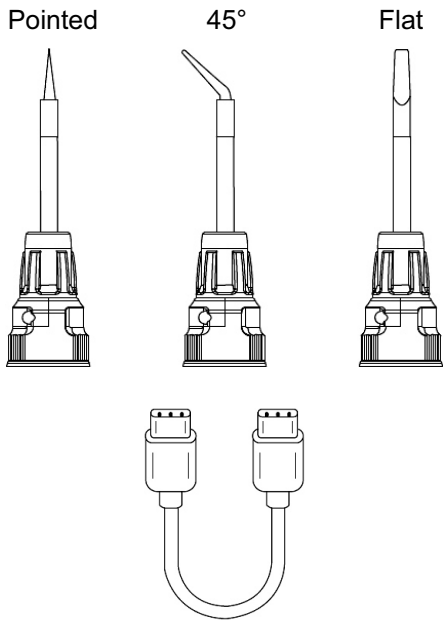

SPECIFICATIONS

Dimensions	Body: 7-7/8" x 1-9/16" x 1" O.A.L.: 11" with cap & heating tip
Weight	6.8 oz
Voltage	8.4V 60W Lithium Ion Battery
Charging Time	2.5 ~ 3 Hours
Running Time	30 minutes
Charger Cord	Type C

Warnings

- Always wear eye protection and heat resistant gloves when operating the tool.
- Work only in a dry area.
- Work only in areas free from flammable materials.
- Always store the tool a dry place out of reach of children or anyone who has not read these instructions.
- Never touch the tip of a hot tool.
- Always rest the tool where heat from it cannot damage nearby items.
- Ensure that power switch is in the OFF position when the tool is not in use.
- Ensure tip is cool before storing the tool. Never leave tool unattended while hot.
- Do not disassemble or modify the battery. The battery contains safety and protection devices which if damaged, may cause the battery to generate heat, rupture or ignite.

© Copyright Plastic Process Equipment, Inc. 2026

Revised 5-21-26

PLASTIC PROCESS EQUIPMENT, INC.
EAST 8303 CORPORATE PARK DRIVE
MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562
WEST 6385 MONTESSOURI STREET
LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877
www.ppe.com
e-mail: sales@ppe.com
Toll Free: USA, Canada & Mexico
800-362-0706
Order Fax: 800-223-8305


HOT TIP SPRUE CLEANER - PORTABLE
— INSTRUCTIONS —

How to Replace the Tip & Tip Holder

1. Ensure Sprue Cleaner switch is in the OFF position! Allow tip to cool completely before replacing tip.
2. Use only genuine replacement tips. 7mm threads.
3. Unscrew old tip holder by rotating tip holding head locking nut counter clockwise and remove.
4. Screw in new tip holding head by rotating locking nut bayonet fitting clockwise until it snaps on lock position. Note: Align the bayonet notch on the housing to install the new tip holding head.
5. Do not file the tip.

Adjust the Direction of the Tip

Rotate the black knurled nut to adjust the direction of the tip.

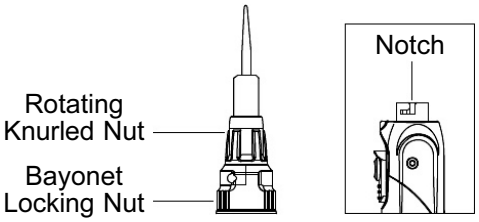

Charging Instructions

"DISPLAY" button can check the remaining power.
If the two illumination LEDs on the head are off or if one indicator light is flashing, then your device needs to be recharged.
Using the supplied cable, insert the Type-C connector into the end of the Sprue Cleaner and a charging port. (Output: 2.0A)

A full charge will take approximately 2.5 ~ 3.0 hours. While charging the tool the LED light(s) will blink on and off. When the tool is fully charged the LED light(s) will no longer blink.

Warnings

Potential electrical shock. Do not use the tool if housing is cracked or damaged. Never use in wet areas. Do not attempt to repair or modify the tool in any way.

Potential burn hazard. Hot tip can cause severe burns. Do not touch tip of tool. Allow tool to cool before touching tip or replacing protective cap. Place hot tool in a safe place to cool down.

When used for sprue cleaning and similar applications, this product contains or may produce chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65warnings.ca.gov.

Brass Products:
CA WARNING: Cancer and reproductive harm from exposure to lead. See www.p65warnings.ca.gov.

PLASTIC PROCESS EQUIPMENT, INC.
EAST 8303 CORPORATE PARK DRIVE
MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562
WEST 6385 MONTESSOURI STREET
LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877
www.ppe.com
e-mail: sales@ppe.com
Toll Free: USA, Canada & Mexico
800-362-0706
Order Fax: 800-223-8305