POWER TEMP II


SOLID STATE POWER CONTROLLER

PMTR: PARAMETER
Press to enter/change parameters

UP/DOWN:
Use to adjust power set point or parameters

POWER: Turns controller on/off


AMPS/ENTER:
Press to view amps/current

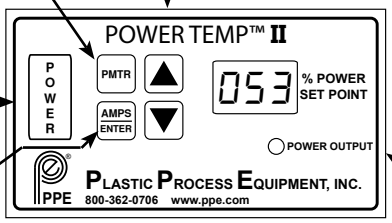

POWER OUTPUT LED: Controller is outputting power when lit.

120VAC OUTLET PT1215

GBB-15 OUTPUT FUSE. VERY FAST ACTING. **ONLY REPLACE WITH GBB-15 OR EQUIVALANT**

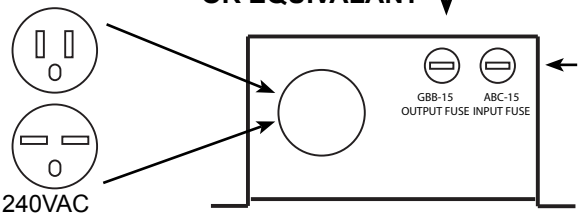

ABC-15 INPUT FUSE. FAST ACTING. **ONLY REPLACE WITH ABC-15 OR EQUIVALANT**

240VAC OUTLET PT2415

Press PMTR to access the parameters. Display will show the parameter number (ie P01), then show the current setting in 2 second intervals. Adjust the parameters using the up/down buttons. Once finished, press PMTR repeating until display is showing SET POINT again. You will hear the piezo beep twice to indicate a save.

PARAMETER:
P01: OUTPUT MODE TYPE
- **BST**: BURST MODE
- **HLF**: HALF WAVE
- **FLL**: FULL WAVE
- **PHS**: PHASE CONTROL

P02: OVER CURRENT LIMIT
- **1**-**16** AMPS

P03: FREQUENCY (DISPLAY ONLY)

ERRORS: PIEZO alarm will sound when an error has been detected.
HIA - Controller has exeeded the amperage set in the parameters (P02). To clear the error, user must turn off, then turn the controller on again.

PLASTIC PROCESS EQUIPMENT, INC.
www.ppe.com
e-mail: sales@ppe.com
PPE WEST
6385 Montessouri Street, Las Vegas, Nevada 89113
702-433-6385 • 800-258-8877 • Fax: 702-433-6388
8303 CORPORATE PARK DRIVE, MACEDONIA (Cleveland), OHIO 44056, U.S.A.
216-367-7000 • Toll Free: 800-321-0562 • Fax: 216-367-7022 • Order Fax: 800-223-8305
Toll Free: USA, Canada & Mexico
800-362-0706