
INSTRUCTIONS
HORIZONTAL CONVEYORS



PC Model Heavy Duty Conveyors



PC Model Extra Wide Conveyors

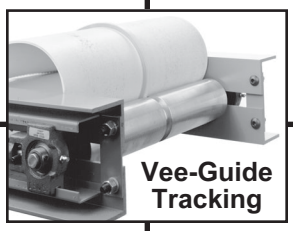

Vee-Guide Tracking



BCP Model Slim-Line Conveyors



FT Model Part Mover Conveyors



VUC Model Infeed Conveyors

MODEL NO.

SERIAL NO.

PPE Conveyors are manufactured and sold direct by Plastic Process Equipment, Inc. We are not associated with any other manufacturer. Always specify genuine PPE conveyors! Do not accept substitutes.

Made in the U.S.A. by Plastic Process Equipment, Inc. © copyright 2025

PPE
PLASTIC PROCESS EQUIPMENT, INC.
EAST
8303 CORPORATE PARK DRIVE
MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562

WEST
6385 MONTESSOURI STREET
LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877

www.ppe.com
e-mail: sales@ppe.com
Toll Free: USA, Canada & Mexico
800-362-0706
Order Fax: 800-223-8305

Thank you for purchasing a conveyor from Plastic Process Equipment, Inc. These instructions are intended as a guide for your new product. If you have any additional questions, contact PPE at 800-321-0562.

RECEIVING

Thoroughly inspect your new conveyor or separator before unpacking it for set up. Report any damage to the motor freight carrier; they are responsible for damages incurred during transit.

ATTENTION!!

Please read through the entire booklet first.

You must be trained and authorized by your employer in the proper installation operation, maintenance and set-up of your new equipment. ***Safety First Always!***

ELECTRICAL

All conveyors and separators are equipped with a control device and an overload protection heater. A grounded 120 volt outlet and a three wire grounded extension cord must be used at all times.

The On/Off switches on some models are resettable, should the switch get overloaded for some reason it may be necessary to reset it before the conveyor will run again. See switch cover for reset instructions.

PROGRAMMABLE CONTROL OPTION

Fully programmable control system offers variable speed 0-30 feet per minute, indexing ability, photo-eye capable, reversible direction and can interface with an injection molding machine. Includes electronic motor overload protection, short, fault, plus over/under voltage protection. Requires 120/60/1 grounded power supply. Control converts power supply to 230/60/3 for the drive motor. Please refer to the control instructions.





WARNING DRIVE MOTOR START/STOP

The standard 1/6hp 655 drive motor is not designed for repeated start stop operation, if you turn the conveyor on and off more than 10 times per hour you damage the motor by overheating. There are special order motors available for start/stop operations, please consult the factory.

CAUTION DURING USE AND OPERATION OF CONVEYORS OR SEPARATORS

- Do not wear loose clothing or jewelry around the conveyor.
- Do not wear rings, necklaces, or jewelry.
- Long hair **must** be tied and netted.
- Keep all hands, arms, and fingers away from any moving parts except the conveyor belt surface.
- Never stand on the conveyor belt for any reason whatsoever.
- Do not operate any conveyor with the guards removed.
- Do not operate the conveyor with parts missing, removed, or in a disassembled state.
- Pay special attention to the ON-OFF switch location.
- Wear safety glasses if your company or process requires them.
- You must unplug the conveyor before performing any repairs or maintenance.
- If you are unsure about installation, operation, maintenance, or setup call PPE!

BELT REPLACEMENT

1) **CAUTION:** Disconnect power from unit.
2) Remove the belt angle strips from top of C-channel. (excludes FT Conveyors)
3) Loosen the jam nuts on the take up adjustment rods to slacken the belt for removal.
4) Remove the lacing pin from belt lacing.
5) Remove belt.
6) Repeat steps in reverse order to install belt.
7) Now refer to Belt Tracking and Tension instructions.

BELT TRACKING AND TENSION


All conveyors and separators are thoroughly tested in our factory after final assembly. Although the belts are adjusted to track properly with the right amount of tension, some adjustments may be necessary during use. For best results and longevity of the drive components, the belt should be run with the **LEAST** tension needed to transport the load without slipping. If the belt is too loose, it will slip causing wear to the belt's underside. **CAUTION: DO NOT OVERTIGHTEN THE CONVEYOR BELT.** An overtightened belt will cause premature failure of your bearings, shafts and, on some models, the drive unit.

PPE
PLASTIC PROCESS EQUIPMENT, INC.
EAST
8303 CORPORATE PARK DRIVE
MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562
WEST
6385 MONTESSOURI STREET
LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877
www.ppe.com
e-mail: sales@ppe.com
Toll Free: USA, Canada & Mexico
800-362-0706
Order Fax: 800-223-8305

BELT TRACKING: THE V-BELT STYLE


The V-Belt tracking system keeps your belt centered and tracking properly. No adjustment should be necessary if both take up bolts are adjusted the same amount during belt tension adjustment. To check the tracking of your belt, measure the take up bolts on both sides of the conveyor. The distance between the center of the roller shaft and the bracket behind the locking nut ***(see Figure 1)*** should be the same for both bolts.

Figure 1

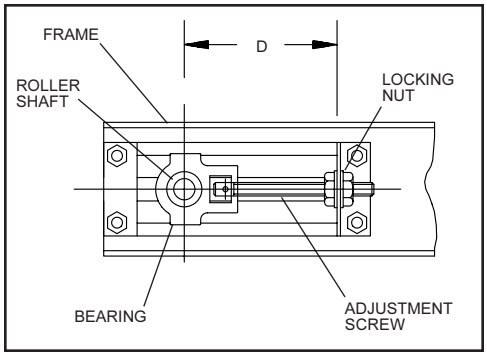

For another quick check, place a carpenter's square along the frame and belt of your conveyor. If it is tracking properly, the carpenter's square will fit snugly in the corner ***(see Figure 2)***. If your conveyor is not tracking properly, adjust the locking nuts on both sides until they are equal. **BE CAREFUL NOT TO OVERTIGHTEN!**

Figure 2

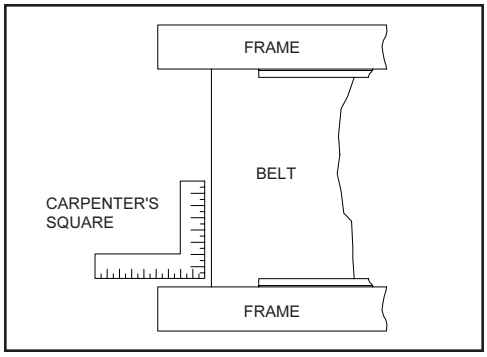

PERMANENT LUBRICATION: DIRECT DRIVE UNITS

PPE conveyors have two drive bearings (the bearings at the motor end of the conveyor), and the take-up bearing (at the opposite end of the conveyor). All bearings are permanently lubricated, therefore we do not provide a grease fitting. Our experience has shown conveyor users tend to over grease bearings to the point where grease works it's way between the rollers and belts causing serious problems of contamination and belt slippage.

PERMANENT LUBRICATION: CHAIN DRIVE UNITS

PPE chain drive units use permanently lubricated drive chains that do not require lubrication. All bearings are permanently lubricated, therefore we do not provide a grease fitting.

CAUTION:
NEVER ALLOW LUBRICATION TO GET ON THE UNDERSIDE OF THE BELT.

CAUTION:
BEARINGS SHOULD NOT RUN CONTINUOUS AT TEMPERATURES OVER 200°F AND SHOULD NEVER EXCEED 225°F FOR INTERMITTENT OPERATIONS.

WARRANTY

All PPE Conveyors have a full **one year warranty**. This warranty doesn't include conveyor belts because they are subject to excessive wear damage and abuse by the user. This Warranty should not extend to goods subjected to misuse, abuse, neglect, accident or improper installation or maintenance, or products or goods which have been altered, modified or repaired by anyone other than seller or its authorized and approved representatives.

MODIFICATIONS:

WARNING! Do not modify this machine in any way. Modifications of any kind not only void any warranty, but it can cause serious injury or damage to the equipment and/or personnel.

PLASTIC PROCESS EQUIPMENT, INC.

EAST: 8303 CORPORATE PARK DRIVE, MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562

WEST: 6385 MONTESSOURI STREET, LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877

www.ppe.com
e-mail: sales@ppe.com
Toll Free: USA, Canada & Mexico
800-362-0706
Order Fax: 800-223-8305


VUC CONVEYOR

08/18/26

ID	QTY	P/N	DESCRIPTION	UOM	
OPTIONAL	1	A-10855	ADJUSTABLE LEG FOR VUC (PAIR)	PAIR	
1	1	D-3174-W-L	FRAME	EA	
2	2	TU250X1	TAKE-UP BEARING	EA	
3	2	C-5582B	ADJ BOLT FOR TAKE UP BRACKET 12"	EA	
4	1	1060	1/4 HP DC MOTOR	EA	
5	1	KB9380C	VARI SPEED CONTROL	EA	
6	2	FB16X1	FIXED BEARING	EA	
7	1	H40B12X5/8	4012 X 5/8 HARDENED SPROCKET	EA	
8	1	H40B12X1	4012 X 1" HARDENED SPROCKET DRIVEN	EA	
9	1	40CK	40 CHAIN, HALF LINK, MASTER LINK KIT	EA	
11	2	B-8190-93	BCP BELT STRIPS 93" (SET)	set	
12	1	MDL-2	FUSE 2A/250V FOR 6183 & 1060 MOTOR	EA	
13	1	K5152	K5152 12' POWER CORD	EA	
14	2	S2112	STRAIN RELIEF FOR ELECTRIC CORD	EA	
15	1	B-5578-12	VEE GROOVE ROLLER 12"	EA	
16	1	B-5578-18	VEE GROOVE ROLLER 18"	EA	
17	1	B-5578-24	VEE GROOVE ROLLER 24"	EA	
18	1	B-5620-12	IDLER SHAFT 12"	EA	
19	1	B-5620-18	IDLER SHAFT 18"	EA	
20	1	B-5620-24	IDLER SHAFT 24"	EA	
21	1	B-6819-12	1" DRIVE SHAFT PC BCP FT 12"	EA	
22	1	B-6819-18	1" DRIVE SHAFT PC BCP FT 18"	EA	
23	1	B-6819-24	1" DRIVE SHAFT PC BCP FT 24"	EA	
24	1	A-6821-12N	V-GR DR ROLLER 1" SHAFT PC/PCS BODINE KNURLE	EA	
25	1	A-6821-18N	V-GR DR ROLLER 1" SHAFT PC/PCS BODINE KNURLE	EA	
26	1	A-6821-24N	V-GR DR ROLLER 1" SHAFT PC/PCS BODINE KNURLE	EA	
27	1	BELT	SEE BELT LIST	EA	
28		B-1285	BEDDING	EA	
29	2	A-12215	BCP TAKE-UP BRACKET	EA	
	1	9838	RESISTOR	EA	

SEE BELT SHEET FOR BELTS

VUC CONVEYOR PARTS

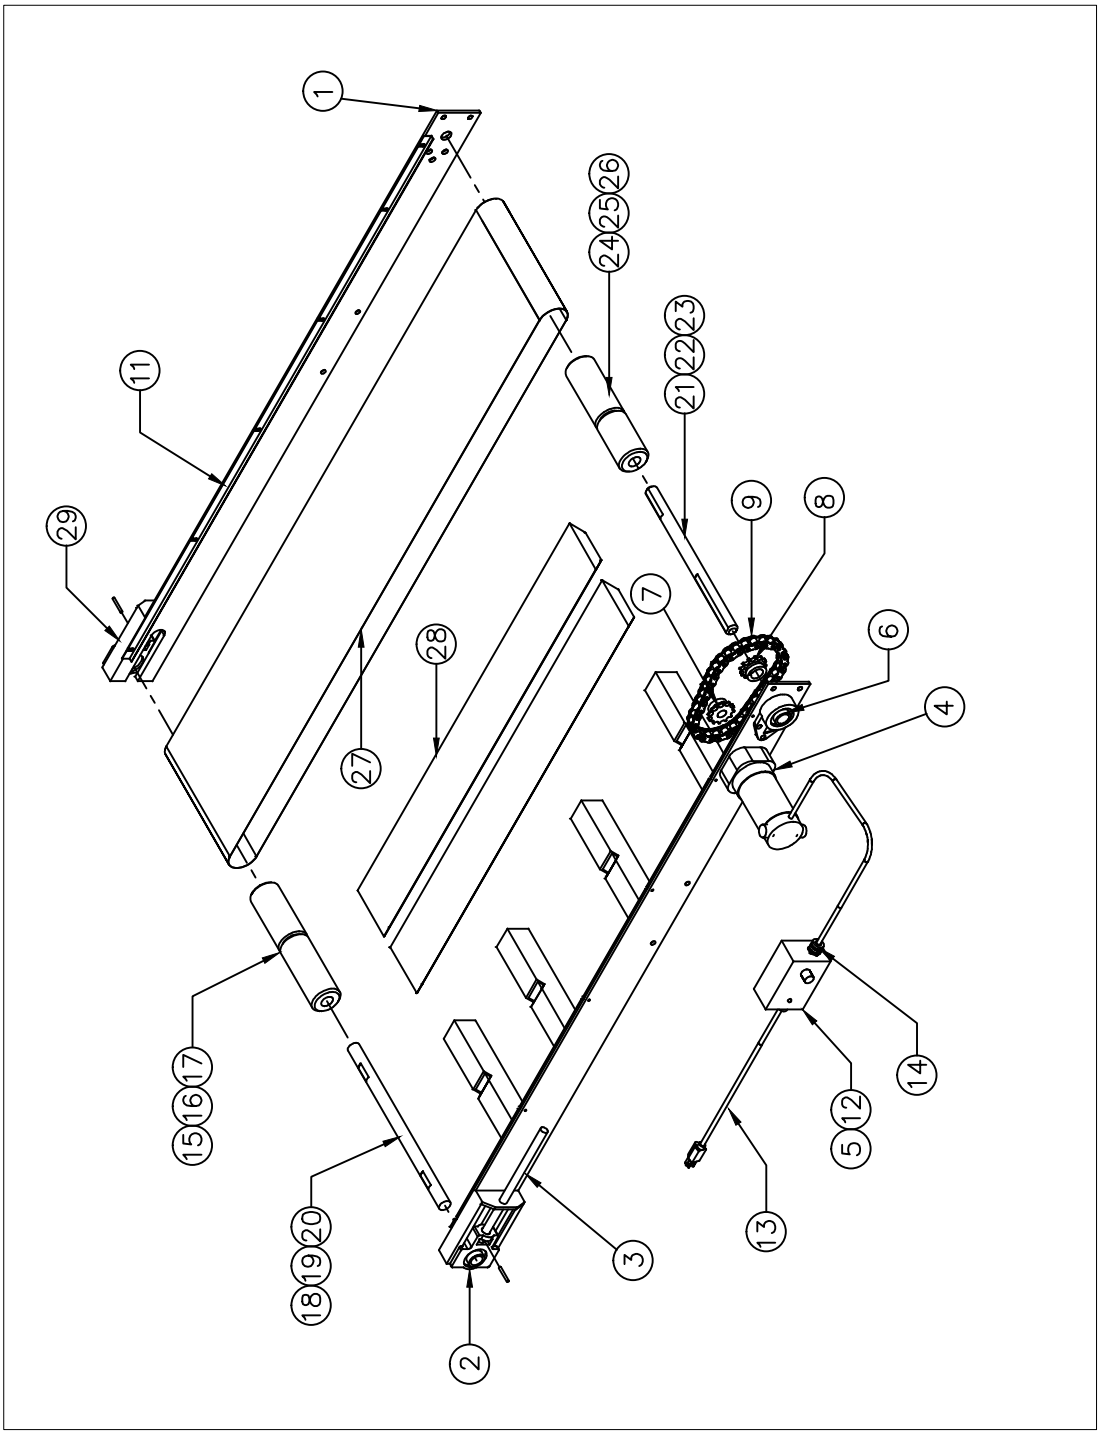

PLASTIC PROCESS EQUIPMENT, INC.

E A S T 8303 Corporate Park Drive
Macedonia, Ohio 44056
(216) 367-7000 FAX: (216) 367-7022
TOLL FREE: 321-0562

W E S T 6385 Montessouri Street
Las Vegas, Nevada 89113
(702) 433-6385 FAX: (702) 433-6388
TOLL FREE: 800-258-8877

www.ppe.com
E-MAIL: sales@ppe.com
TOLL FREE: (800) 362-0706
ORDER FAX: (800) 223-8305