



MOLD PURGING SYSTEM

A QUICK, CLEAN AND SAFE WAY TO DRAIN MOLD FLUIDS BRASS, ALUMINUM OR NYLON




**NYLON
MODELS
WITH GLASS
FILLED NYLON
BODY**

The Mold Purging System makes mold changes cleaner, safer and faster by clearing the water trapped in the cooling (or heating) channels of the mold with the swing of a lever. Just switch the manual lever to the purge position and pressurized air will clear water out in seconds! And at a time when environmental concerns dictate closed loop water systems in plants, the Purging System allows the use of compressed air without compromising the integrity of the water system.

**THE ORIGINAL DESIGN
DEVELOPED FOR PPE!**

FEATURES & BENEFITS

- No water spillage around the press during mold changes for personnel safety.
- Makes mold changes quick, clean & safe.
- Increases mold life by preventing rust deposits and other buildup during mold downtime.
- Molds are removed clean and dry.
- Optional locking pin available to prevent accidental activation.
- Reduce unproductive time during mold changes.
- Full port design permits maximum fluid flow with minimal pressure drop.

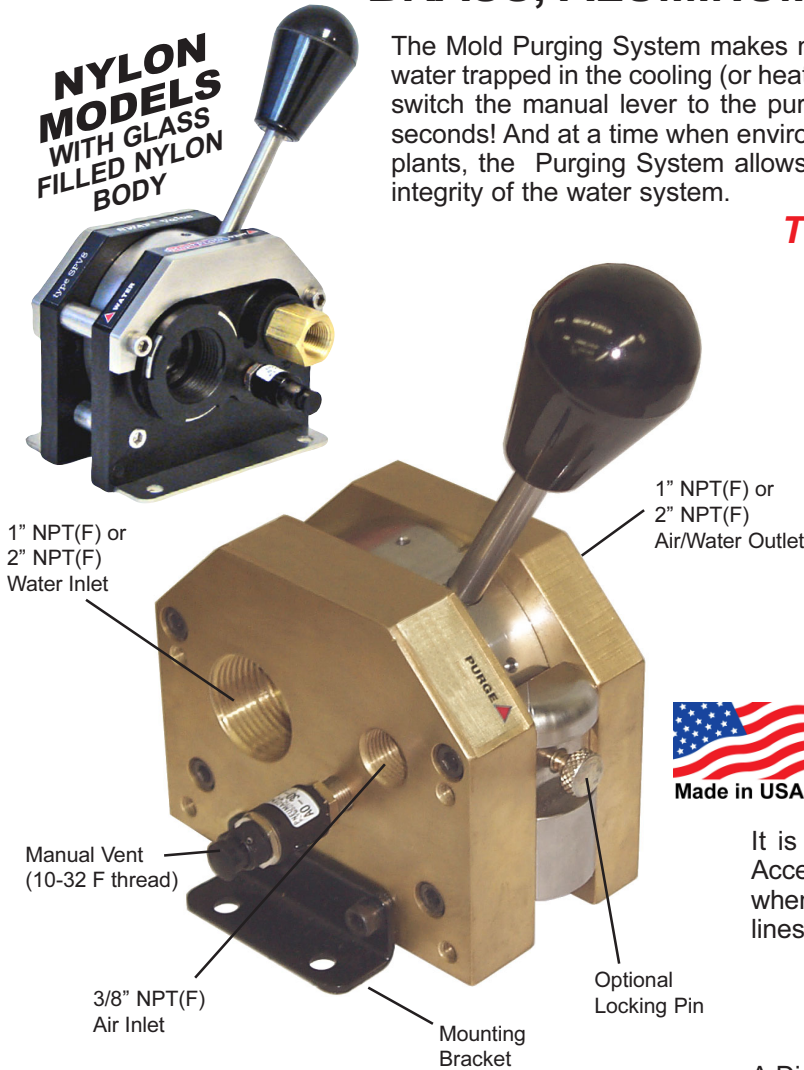

★ CAUTION: ALUMINUM MODELS Regarding Galvanic Corrosion

It is strongly recommended that a Dielectric Fitting (see Accessories and Parts) is purchased for use with this valve when copper or brass piping is present in the water circulating lines. Galvanic corrosion can occur in the presence of:

- more noble metals
- electrolytic connection
- water treatment with copper or bleach
- elevated water temperatures.

A Dielectric Fitting breaks the electrical connection between dissimilar metals helping reduce the incidence of galvanic corrosion.


INSTALLATION:

The Mold Purge Valve should be mounted to a suitable surface using the two supplied angle brackets. Line mounting of the valve to rigid pipe is not recommended. The brackets are preinstalled at the base of the unit, but may be moved to either end of the valve body for alternate mounting positions. If brackets are located at the valve body end, be sure there is adequate clearance to move the selector handle.

A check valve (supplied) should be installed in the return line, downstream from the return manifold. The check valve will prevent fluids from backing into the mold after purging.

Attach the incoming water supply to the "Water Inlet". Attach shop air to the 3/8" NPT "Air Inlet", attach the "Air/Water Outlet" to the supply manifold. Vented air escapes from the "Manual Vent" via a 10-32 threaded opening, which can be connected to a drain tube to route residual moisture and vent air away from the floor.

TYPICAL INSTALLATION SCHEMATIC

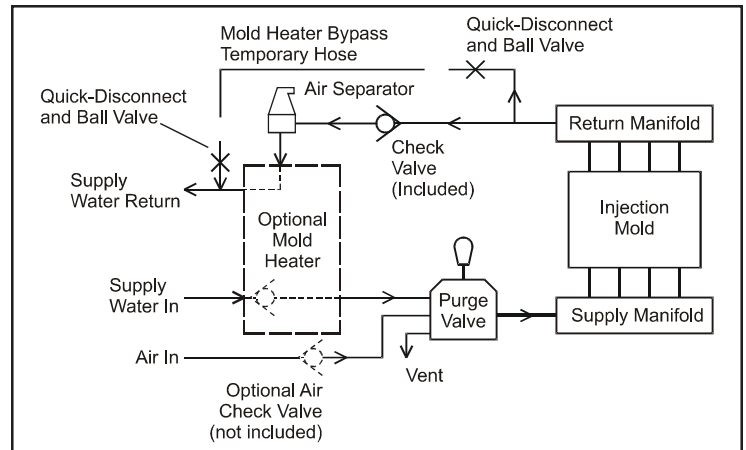

PLASTIC PROCESS EQUIPMENT, INC.

8303 CORPORATE PARK DRIVE
MACEDONIA, OHIO 44056-2300
216-367-7000 • FAX: 216-367-7022
TOLL FREE: 800-321-0562

6385 MONTESSOURI STREET
LAS VEGAS, NEVADA 89113-1186
702-433-6385 • FAX: 702-433-6388
TOLL FREE: 800-258-8877

www.ppe.com
e-mail: sales@ppe.com

Toll Free: USA, Canada & Mexico
800-362-0706

Order Fax: 800-223-8305