

# INSTRUCTIONS FOR VARIABLE INCLINE CONVEYOR



MODEL NO.

SIV

SERIAL NO.

PPE Conveyors are manufactured and sold direct by Plastic Process Equipment, Inc. We are not associated with any other manufacturer. Always specify genuine PPE conveyors! Do not accept substitutes.

Made in the U.S.A. by Plastic Process Equipment, Inc. © copyright 2020



**PLASTIC PROCESS EQUIPMENT, INC.**

www.ppe.com • e-mail: sales@ppe.com

**PPE  
WEST**

6385 Montessouri Street, Las Vegas, Nevada 89113  
702-433-6385 • 800-258-8877 • Fax: 702-433-6388

**PPE  
SOUTH**

11218 Challenger Avenue, Odessa, Florida 33556  
727-834-8888 • 800-282-6783 • Fax: 727-834-8873

8303 CORPORATE PARK DRIVE, MACEDONIA (Cleveland), OHIO 44056, USA

216-367-7000 • Toll Free: 800-321-0562 • Fax: 216-367-7022 • Order Fax: 800-223-8305

Toll Free: USA, Canada & Mexico  
**800-362-0706**

Thank you for purchasing a Variable Incline Conveyor from Plastic Process Equipment. This instruction booklet is intended as a guide for your new product. If you have additional questions, contact PPE at 1-800-362-0706.

## RECEIVING

Thoroughly inspect your new conveyor before unpacking for setup. Report any damage to the motor freight carrier; they are responsible for damages incurred during transit.

## ATTENTION!!

**Please read through the entire booklet first.**

You must be trained and authorized by your employer in the proper installation operation, maintenance and setup of your new equipment. Safety First Always!

## SETUP


**(REQUIRES TWO PEOPLE)**

Your new conveyor is crated and shipped from the factory in a horizontal position.

After uncrating:


- 1) Loosen the pivot bolts (see **Figure 1**) on both sides of the conveyor.

**Figure 1**

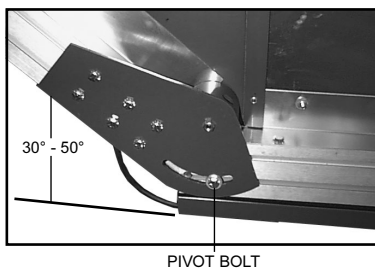


Elevate the incline end while pushing on the belt near the pivot point (see **Figure 2**).

**Figure 2**

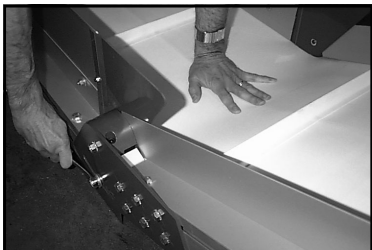

- 2) Set conveyor at desired angle (between 30° and 50°) and retighten the pivot bolts (after setting the conveyor to the desired angle, the inclined end of the conveyor must be supported until the legs are inserted).
- 3) Loosen the leg brackets on the incline end of conveyor (see **Figure 3**). Adjust the leg brackets perpendicular to floor (at this time do not retighten leg brackets).
- 4) Raise the incline end high enough to insert the legs.
- 5) Insert the legs into the side brackets (see **Figure 3**),


**Figure 3**

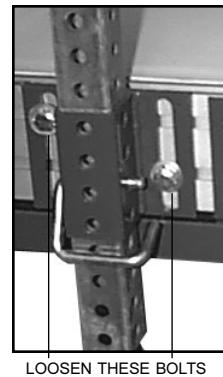

retighten bolts on leg bracket, and set the locking pins.

- 6) Lift the hopper end of the conveyor, insert the legs and set locking pins (all legs should be perpendicular to floor for proper conveyor operation-adjust conveyor to required position and height).
- 7) Check under the inclined end of the conveyor to make sure the belt edges are inside the upper frame sides above the lower lip (see **Figures 4a & 4b**).

**Figure 4a**

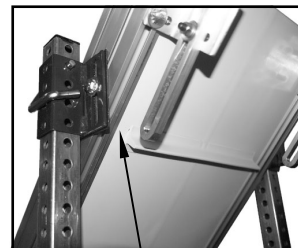

BELT SHOWN IN CORRECT POSITION. BELT EDGE IS INSIDE THE UPPER FRAME SIDE.

**Figure 4b**



BELT SHOWN IN INCORRECT POSITION. BELT EDGE IS OUTSIDE THE UPPER FRAME SIDE.

- 8) Also check under the hopper end of the conveyor to make sure the belt edges are inside the horizontal side frames above the lower lip (see **Figure 5**).

**Figure 5**



THIS FEATURE WAS DESIGNED TO EXTEND THE LIFE OF THE BELT BY PREVENTING "BELT SAG".

- 9) Remember to lock the casters after adjusting the conveyor and setting it into position.

## ELECTRICAL

- 1) Always use a grounded 120 volt outlet and a suitable three wire grounded extension cord.
- 2) All conveyors are equipped with a starter switch and an overload protection heater properly sized for the drive motor. The On/Off switch on some models is resettable, should the switch get overloaded for some reason it may be necessary to reset it before the conveyor will run again. See switch cover for reset instructions.

## WARNING DRIVE MOTOR

The standard 1/6hp 655 drive motor is not designed for repeated start stop operation, if you turn the conveyor on and off more than 10 times per hour you damage the motor by overheating. There are special order motors available for start/stop operations, please consult the factory.

## CAUTION DURING USE AND OPERATION OF CONVEYOR

- Do not wear loose clothing or jewelry around the conveyor.
- Do not wear rings, necklaces, or jewelry.
- Long hair **must** be tied and netted.
- Keep all hands, arms, and fingers away from any moving parts except the conveyor belt surface.
- Never stand on the conveyor belt for any reason whatsoever.
- Do not operate any conveyor with the guards removed.
- Do not operate the conveyor with parts missing, removed, or in a disassembled state.
- Pay special attention to the ON-OFF switch location.
- Wear safety glasses if your company or process requires them.
- You must unplug the conveyor before performing any repairs or maintenance.
- If you are unsure about installation, operation, maintenance, or setup call PPE!

## BELT ADJUSTMENT, TENSION & TRACKING

PPE conveyors feature automatic spring loaded belt tension adjustment. All conveyors and separators are thoroughly tested in our factory after final assembly. The belts are adjusted to track properly so **no adjustment will be necessary**. Because of the endless 2-ply monofilament belt (no lacing to snag or tear) and Vee-guide tracking, there should never be a tracking problem with a PPE conveyor.

## LUBRICATION: CHAIN DRIVE UNITS


(BIC, FT, FS, VICB, PC 06, PC 12, PC 18, PC 24, PCS, PUC, VIB, ICG, PCS) PPE chain drive units use permanently lubricated drive chains that **do not** require lubrication. All bearings are permanently lubricated, therefore we do not provide a grease fitting.

## BELT REPLACEMENT

### (THIS PROCEDURE REQUIRES TWO PEOPLE)

- 1) Disconnect all power to the conveyor.
- 2) Adjust the conveyor to a 45° angle.
- 3) Remove the eight hopper bolts on top of frame (see **Figure 6**) and the two Allen head screws and the A-5470 plastic transition covers where the hopper meets the incline section.

Figure 6

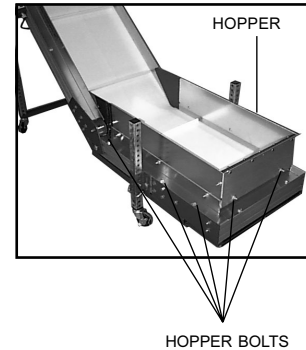


- 4) Remove hopper.
- 5) Remove end caps (and optional part drop tray if purchased).
- 6) Using a pencil draw a vertical line across the frame and side rails (used to align side rails during reassembly).
- 7) Loosen the bolts on the incline side rails (**DO NOT REMOVE BOLTS**).
- 8) Slide the incline side rails off of the conveyor.
- 9) Place conveyor on it's side (drive side down), conveyor must be elevated to clear on/off switch.
- 10) Remove leg pins and remove upper and lower legs.
- 11) Mark the edge of the motor assembly plates against the frame on the non-drive side on the hopper end (see **Figure 7** - overlap is preset at 3-1/4") (make sure you align the frame overlap with your marks during reassembly). **DO NOT LOOSEN ANY ALLEN HEAD BOLTS!**

Figure 7



- 12) Remove plate on non-drive side (*see Figure 8*).

**Figure 8**

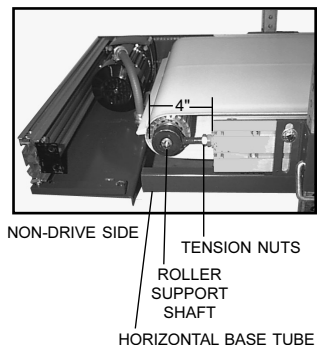

- 13) Loosen the bolts holding the horizontal base tube on the non-drive side. Slide the horizontal base tube off.
- 14) Remove belt edges from transition pivot rollers and from bottom extrusion track.
- 15) While compressing the roller on the non-drive end, pull the belt half way up and off of the drive roller.
- 16) Continue compressing the non-drive roller while pulling the belt halfway off the non-drive end. When belt is halfway off both ends, it can be removed the rest of the way.

**CAUTION:**  
**ROLLER AND ENDS UNDER SPRING TENSION!**

- 17) To reassemble the conveyor, follow the instructions in reverse order. When reinstalling the belt, the Vee-Guide on the bottom of the belt is seated in the groove of the rollers.
- 18) After installing the new belt and reassembling the conveyor, return conveyor to required height and angle of operation.
- 19) Check under both the inclined end of the conveyor and the hopper end of the conveyor to make sure the belt edges are inside the frame sides above the lower lip (*see Figures 4a, 4b & 5*).


**WARRANTY**

All PPE Conveyors have a full **two year warranty**. This warranty doesn't include conveyor belts because they are subject to excessive wear damage and abuse by the user. This Warranty should not extend to goods subjected to misuse, abuse, neglect, accident or improper installation or maintenance, or products or goods which have been altered, modified or repaired by anyone other than seller or its authorized and approved representatives.

**MODIFICATIONS:**

**WARNING!** Do not modify this machine in any way. Modifications of any kind not only void any warranty, but it can cause serious injury or damage to the equipment and/or personnel.

# SIV CONVEYOR PARTS

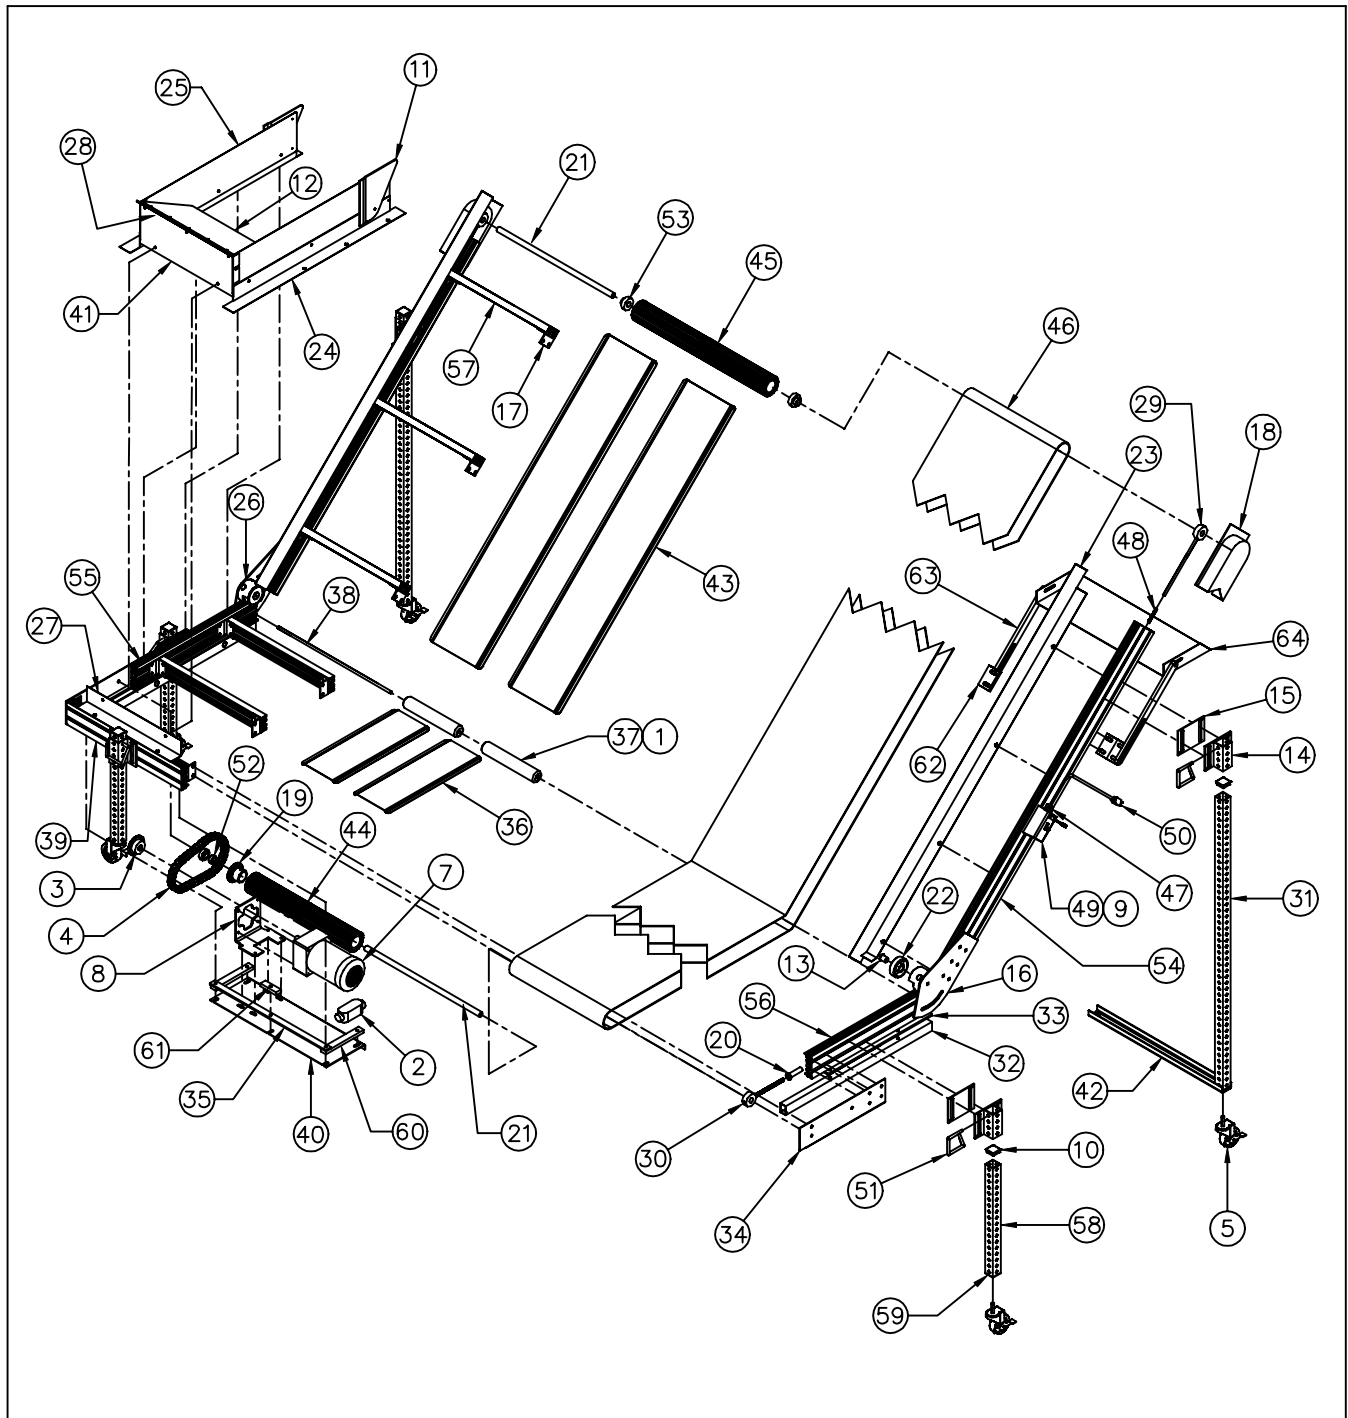

## PLASTIC PROCESS EQUIPMENT, INC.

8303 Corporate Park Drive, Macedonia (CLEVELAND), OHIO 44056  
 (216) 367-7000 TOLL FREE: 800-321-0562 FAX (216) 367-7022 ORDER FAX: 800-223-8305 EMAIL: SALES@PPE.COM

6385 Montessori Street, Las Vegas, Nevada 89113  
 (702) 433-6385 TOLL FREE: 800-258-8877  
 FAX: (702) 433-6388

11218 Challenger Ave., Odessa, FL 33556  
 (727) 834-8888 TOLL FREE: 800-282-6783  
 FAX: (727) 834-8873

# SIV CONVEYORS

## PARTS LIST 12"

05/28/21

09:45:53 AM

ID	QTY	P/N	DESCRIPTION	UOM
OPTIONAL	1	5044	1/4 HP DC BODINE MOTOR BUILT BEFORE 2/1/2019	EA
OPTIONAL	1	MDL-3	FUSE 3A/250V FOR 5044 MOTOR	EA
OPTIONAL	1	0791B	0791B BODINE VARIABLE SPEED CONTROL W/12FT CORD	EA
OPTIONAL	1	C-6909-1	VARIABLE SPEED MOUNTING BRACKET FLAT FOR MM23101C	EA
OPTIONAL	1	1060	1/4 HP DC MOTOR BUILT AFTER 2/1/2019	EA
OPTIONAL	1	0970	BRACKET FOR 1060 MOTOR	EA
OPTIONAL	1	35BS19HTX5/8	#35 HARDENED SPROCKET FOR SIV & VIB CONVEYOR	EA
1	4	1416D-1/2	TRANSITION ROLLER END CAP FOR SIV/VIB	EA
2	1	30432	JUNCTION BOX	EA
3	1	35BS19HTX3/4	#35 HARDENED SPROCKET KEYED W/SET SCREW	EA
4	1	35CK	35 CHAIN, HALF LINK, MASTER LINK KIT	EA
5	5	CW4	CASTERS WITH LOCK	EA
7	1	655	655 1/6HP AC BODINE GEARMOTOR	EA
8	1	655L	L BRACKET FOR 655/ 6183/ 5044 MOTOR	EA
9	1	CR101Y11	SWITCH WITH PILOT LIGHT	EA
10	5	VG-560-1.5-11	CAP FOR SP/SI/SIV/VIB/BCH LEGS	EA
11	2	A-5470	PLASTIC TRANSITION COVER FOR SIV/VIB (set)	EA
12	1	A-5474-12	PLASTIC FLAPPER 12" FOR SIV/VIB (WHITE)	EA
13 KIT	2	A-5476K	PLASTIC WHEEL, ROLLER HUB WITH STUD, WASHER, AND NUT (SET LEFT&RIGHT)	EA
14	5	A-5477	LEG MOUNTING BRACKET FOR SP, SI, SIV/VIB, BCH	EA
15	5	A-5480	LEG MOUNTING BRACKET SPACER FOR SP, SI, SIV/VIB, BCH	EA
16	2	A-5481	SWIVEL PLATE FOR SIV/VIB	EA
17	2	A-5486	FRAME "L" BRACKET FOR SI, SP, SIV/VIB, BCH	EA
18	2	A-6850	PLASTIC BEARING COVER	EA
19	1	A-5959	MACHINED SPROCKET FOR CONVEYOR	EA
20	3	A-5980	PLASTIC BUSHING	EA
21	2	A-5982-12	SHAFTS FOR CONVEYORS 12"	EA
22	2	A-6987	TRANSITION ROLLER FOR SIV/VIB	EA
23	1	B-5440-4	ALUM UPPER SIDE RAIL FOR SIV (SET) W/ANODIZE	SET
23	1	B-5440-5	ALUM UPPER SIDE RAIL FOR SIV (SET), INCLUDES ANODIZE	SET
24	1	B-5441-3	ALUM SIDE RAIL FOR SIV (SET) , INCLUDES ANODIZE	SET
24	1	B-5441-4	ALUM SIDE RAIL FOR SIV (SET)	SET
25	1	B-5442-3	ALUM LOWER SIDE RAIL FOR SIV/VIB (SET), INCLUDES ANODIZE	SET
25	1	B-5442-4	ALUM LOWER SIDE RAIL FOR SIV/VIB (SET) , INCLUDES ANODIZE	SET
26	2	B-5471	ALUM ROLLER COVER FOR SIV/VIB (SET)	EA
27	1	B-5472-12	ALUM FLAPPER ANGLE FOR SIV/VIB 12"	EA
28	1	B-5475-12	FLAPPER HINGE 12" FOR SIV/VIB	EA
29	2	B-5478	TENSION ADJUSTMENT ROD FOR SIV/VIB (OLD STYLE) 3/8"	EA
29	2	B-10164	TENSION ADJUSTMENT ROD FOR SIV/VIB NEW STYLE 1/2"	EA
30	1	B-5479	TENSION ADJUSTMENT ROD FOR SI SIV/VIB, SP, BCH	EA
31	2	B-5483-48	LEG TUBE ONLY FOR SI & SIV/VIB 48"	EA
32	2	B-5487-2	HORIZONTAL MOUNT FOR SIV/VIB 2'	EA
32	2	B-5487-3	HORIZONTAL MOUNT FOR SIV/VIB 3'	EA
33	2	B-5488-2	HORIZONTAL SPACER FOR SIV/VIB 2'	EA
33	2	B-5488-3	HORIZONTAL SPACER FOR SIV/VIB 3'	EA
34	1	B-5490	DRIVE SIDE PLATE FOR SIV (SET)	SET
35	1	B-5491-12	PLASTIC END RAIL SPACER FOR SIV/VIB 12"	EA
36	2	B-5494-2-12G	GALV LOWER BEDDING FOR SIV/VIB 2' X 12"	EA
36	2	B-5494-3-12G	GALV LOWER BEDDING FOR SIV/VIB 3' X 12"	EA
37	2	B-5504-12	TRANSITION ROLLER TUBE FOR SIV/VIB 12"	EA
38	1	B-5516-12	TRANSITION ROLLER SHAFT FOR SIV/VIB 12"	EA
39	1	B-5566-12	FRAME END FOR SIV/VIB 12"	EA
40	1	B-5623-12	MOTOR BASE PLATE 12" FOR SIV/VIB	EA
41	1	B-5626-12	ALUM FLAPPER MOUNT 12" FOR SIV/VIB (INCLUDING ANODIZE)	EA
42	1	B-5627-12	STAND CROSSBRACE 12" FOR SI, SIV/VIB	EA
43	1	B-5983-4-12G	GALV BEDDING FOR SI/SP/SIV CONVEYOR (ea) 4' X 12"	SET
43	1	B-5983-5-12G	GALV BEDDING FOR SI/SP/SIV CONVEYOR (ea) 5' X 12"	SET
44	1	B-5984-12	DRIVE ROLLER (DOES NOT INCLUDE BEARINGS) 12"	EA
45	1	B-5998-12	IDLER ROLLER (DOES NOT INCLUDE BEARINGS) 12"	EA
46	1	BELT	BELT	EA
47	2	S2112	STRAIN RELIEF FOR ELECTRIC CORD	EA
48	2	DS-232	BELT ADJUSTMENT SPRINGS 22" OLD STYLE PRE 9/07	EA
48	2	DS-233	BELT ADJUSTMENT SPRINGS 11" NEW STYLE 9/07	EA
49	1	QOA578	HEATER/FUSE FOR 655 MOTOR	EA
50	1	K5152	K5152 12' POWER CORD	EA
51	5	T092	LOCK PIN	EA
52	1	RAL012NPP+COL	SPROCKET BEARING w/COLLAR FOR SP, SI, SIV/VIB, BCH	EA
53	3	YA012RR	BEARINGS FOR SP, SI, SIV/VIB, BCH CONVEYOR	EA
54	2	B-5993-4	UPPER FRAME SIDE FOR SIV	EA
54	2	B-5993-5	UPPER FRAME SIDE FOR SIV	EA
55	1	B-5996-3	HORIZONTAL RIGHT SIDE FRAME FOR SIV	EA
55	1	B-5996-4	HORIZONTAL RIGHT SIDE FRAME FOR SIV	EA
56	1	B-6192-3	HORIZONTAL LEFT SIDE FRAME FOR SIV	EA
56	1	B-6192-4	HORIZONTAL LEFT SIDE FRAME FOR SIV	EA
57		B-5985-12	CROSS MEMBER 12"	EA
58	3	B-5483-18	LEG TUBE ONLY FOR SI 18"	EA
59	5	VG5538B12	LEG THREADED INSERT FOR CONVEYOR LEGS	EA
60	2	A-6549A	STEEL MOTOR PLATE SPACER FOR SIV/VIB	EA
61	1	A-6549B	STEEL MOTOR PLATE SPACER FOR SIV/VIB	EA
62	1	A-6902	CONVEYOR TRAY BRACKET	EA
63	1	B-4016	FS ATTACHMENT ADJ BAR (set)	EA
64	1	A-6453-12	SS TRAY 12"	EA

SEE BELT SHEET FOR BELTS

## SIV CONVEYORS

05/28/21

## PARTS LIST 18"

09:48:11 AM

ID	QTY	P/N	DESCRIPTION	UOM
OPTIONAL	1	5044	1/4 HP DC BODINE MOTOR BUILT BEFORE 2/1/2019	EA
OPTIONAL	1	MDL-3	FUSE 3A/250V FOR 5044 MOTOR	EA
OPTIONAL	1	0791B	0791B BODINE VARIABLE SPEED CONTROL W/12FT CORD	EA
OPTIONAL	1	C-6909-1	VARIABLE SPEED MOUNTING BRACKET FLAT FOR MM23101C	EA
OPTIONAL	1	1060	1/4 HP DC MOTOR BUILT AFTER 2/1/2019	EA
OPTIONAL	1	0970	BRACKET FOR 1060 MOTOR	EA
OPTIONAL	1	35BS19HTX5/8	#35 HARDENED SPROCKET FOR SIV & VIB CONVEYOR	EA
1	4	1416D-1/2	TRANSITION ROLLER END CAP FOR SIV/VIB	EA
2	1	30432	JUNCTION BOX	EA
3	1	35BS19HTX3/4	#35 HARDENED SPROCKET KEYED W/SET SCREW	EA
4	1	35CK	35 CHAIN, HALF LINK, MASTER LINK KIT	EA
5	5	CW4	CASTERS WITH LOCK	EA
7	1	655	655 1/6HP AC BODINE GEAR MOTOR	EA
8	1	655L	L BRACKET FOR 655/ 6183/ 5044 MOTOR	EA
9	1	CR101Y11	SWITCH WITH PILOT LIGHT	EA
10	5	VG-560-1.5-11	CAP FOR SP/SI/SIV/VIB/BCH LEGS	EA
11	2	A-5470	PLASTIC TRANSITION COVER FOR SIV/VIB (set)	EA
12	1	A-5474-18	PLASTIC FLAPPER 18" FOR SIV/VIB	EA
13 KIT	2	A-5476K	PLASTIC WHEEL, ROLLER HUB WITH STUD, WASHER, AND NUT (SET LEFT&RIGHT)	EA
14	5	A-5477	LEG MOUNTING BRACKET FOR SP, SI, SIV/VIB, BCH	EA
15	5	A-5480	LEG MOUNTING BRACKET SPACER FOR SP, SI, SIV/VIB, BCH	EA
16	2	A-5481	SWIVEL PLATE FOR SIV/VIB	EA
17	6	A-5486	FRAME "L" BRACKET FOR SI, SP, SIV/VIB, BCH	EA
18	2	A-6850	PLASTIC BEARING COVER	EA
19	1	A-5959	MACHINED SPROCKET FOR CONVEYOR	EA
20	3	A-5980	PLASTIC BUSHING	EA
21	2	A-5982-18	SHAFTS FOR CONVEYORS 18"	EA
22	2	A-6987	TRANSITION ROLLER FOR VIB/SIV	EA
23	1	B-5440-4	ALUM UPPER SIDE RAIL FOR SIV (SET) W/ANODIZE	SET
23	1	B-5440-5	ALUM UPPER SIDE RAIL FOR SIV (SET), INCLUDES ANODIZE	SET
24	1	B-5441-3	ALUM SIDE RAIL FOR SIV (SET), INCLUDES ANODIZE	SET
24	1	B-5441-4	ALUM SIDE RAIL FOR SIV (SET)	SET
25	1	B-5442-3	ALUM LOWER SIDE RAIL FOR SIV/VIB (SET), INCLUDES ANODIZE	SET
25	1	B-5442-4	ALUM LOWER SIDE RAIL FOR SIV/VIB (SET), INCLUDES ANODIZE	SET
26	2	B-5471	ALUM ROLLER COVER FOR SIV/VIB (SET)	EA
27	1	B-5472-18	ALUM FLAPPER ANGLE FOR SIV/VIB 18"	EA
28	1	B-5475-18	FLAPPER HINGE 18" FOR SIV/VIB	EA
29	2	B-5478	TENSION ADJUSTMENT ROD FOR SIV/VIB (OLD STYLE) 3/8"	EA
29	2	B-10164	TENSION ADJUSTMENT ROD FOR SIV/VIB NEW STYLE 1/2"	EA
30	1	B-5479	TENSION ADJUSTMENT ROD FOR SI SIV/VIB, SP, BCH	EA
31	2	B-5483-48	LEG TUBE ONLY FOR SI & SIV/VIB 48"	EA
32	2	B-5487-2	HORIZONTAL MOUNT FOR SIV/VIB 2'	EA
32	2	B-5487-3	HORIZONTAL MOUNT FOR SIV/VIB 3'	EA
33	2	B-5488-2	HORIZONTAL SPACER FOR SIV/VIB 2'	EA
33	2	B-5488-3	HORIZONTAL SPACER FOR SIV/VIB 3'	EA
34	1	B-5490	DRIVE SIDE PLATE FOR SIV (SET)	SET
35	1	B-5491-18	PLASTIC END RAIL SPACER FOR SIV/VIB 18"	EA
36	2	B-5494-2-18G	GALV LOWER BEDDING FOR SIV/VIB 2' X 18"	EA
36	2	B-5494-3-18G	GALV LOWER BEDDING FOR SIV/VIB 3' X 18"	EA
37	2	B-5504-18	TRANSITION ROLLER TUBE FOR SIV/VIB 18"	EA
38	1	B-5516-18	TRANSITION ROLLER SHAFT FOR SIV/VIB 18"	EA
39	1	B-5566-18	FRAME END FOR SIV/VIB 18"	EA
40	1	B-5623-18	MOTOR BASE PLATE 18" FOR SIV/VIB	EA
41	1	B-5626-18	ALUM FLAPPER MOUNT 18" FOR SIV/VIB	EA
42	1	B-5627-18	STAND CROSSBRACE 18" FOR SI, SIV/VIB	EA
43	2	B-5983-4-18G	GALV BEDDING FOR SI/SP/SIV CONVEYOR (ea) 4' X 18"	SET
43	2	B-5983-5-18G	GALV BEDDING FOR SI/SP/SIV CONVEYOR (ea) 5' X 18"	SET
44	1	B-5984-18	DRIVE ROLLER (DOES NOT INCLUDE BEARINGS) 18"	EA
45	1	B-5998-18	IDLER ROLLER (DOES NOT INCLUDE BEARINGS) 18"	EA
46	1	BELT	BELT	EA
47	2	S2112	STRAIN RELIEF FOR ELECTRIC CORD	EA
48	2	DS-232	BELT ADJUSTMENT SPRINGS 22" OLD STYLE PRE 9/07	EA
48	2	DS-233	BELT ADJUSTMENT SPRINGS 11" NEW STYLE 9/07	EA
49	1	QOA578	HEATER/FUSE FOR 655 MOTOR	EA
50	1	K5152	K5152 12' POWER CORD	EA
51	5	T092	LOCK PIN	EA
52	1	RA012NPP+COL	SPROCKET BEARING w/COLLAR FOR SP, SI, SIV/VIB, BCH	EA
53	3	YA012RR	BEARINGS FOR SP, SI, SIV/VIB, BCH CONVEYOR	EA
54	2	B-5993-4	UPPER FRAME SIDE FOR SIV	EA
54	2	B-5993-5	UPPER FRAME SIDE FOR SIV	EA
55	1	B-5996-3	HORIZONTAL RIGHT SIDE FRAME FOR SIV	EA
55	1	B-5996-4	HORIZONTAL RIGHT SIDE FRAME FOR SIV	EA
56	1	B-6192-3	HORIZONTAL LEFT SIDE FRAME FOR SIV	EA
56	1	B-6192-4	HORIZONTAL LEFT SIDE FRAME FOR SIV	EA
57		B-5985-18	CROSS MEMBER 18"	EA
58	3	B-5483-18	LEG TUBE ONLY FOR SI 18"	EA
59	5	VG5538B12	LEG THREADED INSERT FOR CONVEYOR LEGS	EA
60	2	A-6549A	STEEL MOTOR PLATE SPACER FOR SIV/VIB	EA
61	1	A-6549B	STEEL MOTOR PLATE SPACER FOR SIV/VIB	EA
62	2	A-6902	CONVEYOR TRAY BRACKET	EA
63	1	B-4016	FS ATTACHMENT ADJ BAR (set)	EA
64	1	A-6453-18	SS TRAY 18"	EA

SEE BELT SHEET FOR BELTS