



# INSTRUCTIONS CONVEYORS & SEPARATORS



**Bottle & Parts**



**Separators**



**Inclined & Infeed Combo**



**Vee-Guide Tracking**



**FIC Conveyor**



**Granulator Feed**



**Inclined**



**Parts Conveyor**

MODEL NO.
<input type="text"/>
SERIAL NO.
<input type="text"/>

PPE Conveyors are manufactured and sold direct by Plastic Process Equipment, Inc. We are not associated with any other manufacturer. Always specify genuine PPE conveyors! Do not accept substitutes.

Made in the U.S.A. by Plastic Process Equipment, Inc. © copyright 2024



**PLASTIC PROCESS EQUIPMENT, INC.**

8303 CORPORATE PARK DRIVE  
MACEDONIA, OHIO 44056-2300  
216-367-7000 • FAX: 216-367-7022  
TOLL FREE: 800-321-0562

6385 MONTESSOURI STREET  
LAS VEGAS, NEVADA 89113-1186  
702-433-6385 • FAX: 702-433-6388  
TOLL FREE: 800-258-8877

[www.ppe.com](http://www.ppe.com)  
e-mail: [sales@ppe.com](mailto:sales@ppe.com)

**Toll Free: USA, Canada & Mexico**  
**800-362-0706**

Order Fax: 800-223-8305

Thank you for purchasing a conveyor or separator from Plastic Process Equipment, Inc. These instructions are intended as a guide for your new product. If you have any additional questions, contact PPE at 800-321-0562.

## RECEIVING

Thoroughly inspect your new conveyor or separator before unpacking it for set up. Report any damage to the motor freight carrier; they are responsible for damages incurred during transit.

## ATTENTION!!

**Please read through the entire booklet first.**

You must be trained and authorized by your employer in the proper installation operation, maintenance and set-up of your new equipment. **Safety First Always!**

## ELECTRICAL

All conveyors and separators are equipped with a starter switch and an overload protection heater. A grounded 120 volt outlet and a three wire grounded extension cord must be used at all times.

The On/Off switches on some models are resettable, should the switch get overloaded for some reason it may be necessary to reset it before the conveyor will run again. See switch cover for reset instructions.

## WARNING DRIVE MOTOR

The standard 1/6hp 655 drive motor is not designed for repeated start stop operation, if you turn the conveyor on and off more than 10 times per hour you damage the motor by overheating. There are special order motors available for start/stop operations, please consult the factory.

## CAUTION DURING USE AND OPERATION OF CONVEYORS OR SEPARATORS

- Do not wear loose clothing or jewelry around the conveyor.
- Do not wear rings, necklaces, or jewelry.
- Long hair **must** be tied and netted.
- Keep all hands, arms, and fingers away from any moving parts except the conveyor belt surface.
- Never stand on the conveyor belt for any reason whatsoever.
- Do not operate any conveyor with the guards removed.
- Do not operate the conveyor with parts missing, removed, or in a disassembled state.
- Pay special attention to the ON-OFF switch location.
- Wear safety glasses if your company or process requires them.
- You must unplug the conveyor before performing any repairs or maintenance.
- If you are unsure about installation, operation, maintenance, or setup call PPE!

## TYPES OF CONVEYORS

PPE carries both V-Belt and non V-Belt Conveyors. The easiest way to tell if your conveyor is a V-Belt is by the serial number. If there is a "V" in the serial number your conveyor is a V-Belt. **EXAMPLE:** the serial number PC1812V251439 is a conveyor with the V-Belt system (note the V in the serial number). If the serial number on your conveyor has an **R** or an **A** following the **V**, your conveyor has direct drive. **EXAMPLE:** PC 182VR251439 is a direct drive conveyor.


## BELT TRACKING AND TENSION

All conveyors and separators are thoroughly tested in our factory after final assembly. Although the belts are adjusted to track properly with the right amount of tension, some adjustments may be necessary during use. For best results and longevity of the drive components, the belt should be run with the **LEAST** tension needed to transport the load without slipping. If the belt is too loose, it will slip causing wear to the belt's underside. **CAUTION: DO NOT OVERTIGHTEN THE CONVEYOR BELT.** An overtightened belt will cause premature failure of your bearings, shafts and, on some models, the drive unit.

## BELT TRACKING: THE V-BELT STYLE

The V-Belt tracking system keeps your belt centered and tracking properly. No adjustment should be necessary if both take up bolts are adjusted the same amount during belt tension adjustment. To check the tracking of your belt, measure the take up bolts on both sides of the conveyor. The distance between the center of the roller shaft and the bracket behind the locking nut (**see Figure 1**) should be the same for both bolts.

Figure 1

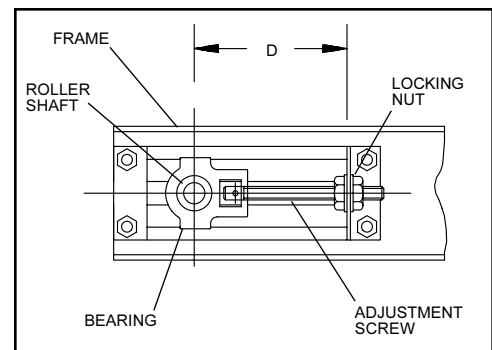

	<b>PLASTIC PROCESS EQUIPMENT, INC.</b>	<b>www.ppe.com</b> e-mail: sales@ppe.com
	<b>E</b> 8303 CORPORATE PARK DRIVE <b>A</b> MACEDONIA, OHIO 44056-2300 <b>S</b> 216-367-7000 • FAX: 216-367-7022 <b>T</b> TOLL FREE: 800-321-0562	<b>W</b> 6385 MONTESSOURI STREET <b>E</b> LAS VEGAS, NEVADA 89113-1186 <b>S</b> 702-433-6385 • FAX: 702-433-6388 <b>T</b> TOLL FREE: 800-258-8877




# VICB CONVEYORS VS DRIVE

12/31/24

## PARTS LIST

ID	QTY	P/N	DESCRIPTION	UOM
OPTIONAL	2	A-1275	CHUTE BRACKETS (SETS)	EA
OPTIONAL	1	B-1281-12	DISCHARGE TRAY 12"	EA
OPTIONAL	1	B-1281-18	DISCHARGE TRAY 18"	EA
OPTIONAL	1	B-1281-24	DISCHARGE TRAY 24"	EA
1	1	D-1111-(WIDTH)	ALUMINUM CHANNEL FRAME	EA
2	1	B-1607	INCLINED LEGS FOR ICB (SET)	SET
3	1	B-1276-12	WHEEL SHAFT 12"	EA
3	1	B-1276-18	WHEEL SHAFT 18"	EA
3	1	B-1276-24	WHEEL SHAFT 24"	EA
4	2	95779362	10" DIA WHEELS	EA
7	1	S2112	STRAIN RELIEF FOR ELECTRIC CORD	EA
8	1	B-9536	ICB HOPPER SIDES ALUMINUM (SET), INCLUDING ANODI	EA
8	1	B-9536SS	ICB HOPPER SIDES STAINLESS (SET)	EA
9	1	A-9537-12	HOPPER END FOR VICB 12" ALUMINUM	EA
9	1	A-9537-12SS	HOPPER END FOR VICB 12" STAINLESS	EA
9	1	A-9537-18	HOPPER END FOR VICB 18" ALUMINUM	EA
9	1	A-9537-18SS	HOPPER END FOR VICB 18" STAINLESS	EA
9	1	A-9537-24	HOPPER END FOR VICB 24" ALUMINUM, INCLUDING ANOD	EA
9	1	A-9537-24SS	HOPPER END FOR VICB 24" STAINLESS	EA
10	1	A-9538-12	FLAPPER STRIP FOR VICB 12"	EA
10	1	A-9538-12SS	SS FLAPPER STRIP FOR VICB 12"	EA
10	1	A-9538-18	FLAPPER STRIP FOR VICB 18"	EA
10	1	A-9538-18SS	SS FLAPPER STRIP FOR VICB 18"	EA
10	1	A-9538-24	FLAPPER STRIP FOR VICB 24", INCLUDING ANODIZE	EA
10	1	A-9538-24SS	SS FLAPPER STRIP FOR VICB 24"	EA
11	1	A-9539-12	FLAPPER BELT FOR 12" VICB	EA
11	1	A-9539-18	FLAPPER BELT FOR 18" VICB	EA
11	1	A-9539-24	FLAPPER BELT FOR 24" VICB	EA
12	2	A-1274	INCLINED FEET	EA
13	1	B-9535	ICB ALUMINUM SIDERAILS (SET)	SET
13	1	B-9535SS	ICB STAINLESS SIDERAILS (SET)	SET
26		B-1285	BEDDING	EA
30	2	B-3720	PLASTIC STRIP BELT GUIDE PER FOOT 1/8 X 5/8 X 96	EA
31	4	2X569	5/8" COLLAR	EA
35	1	40CK	40 CHAIN, HALF LINK, MASTER LINK KIT	EA
39	1	BELT	SEE BELT SHEET	
40	1	H40B10X5/8	4010 X 5/8" HARDENED SPROCKET	EA
41	1	A-6867-12	1" TU SHAFT PUC, BIC, ICB BODINE	EA
41	1	A-6867-18	1" TU SHAFT PUC, BIC, ICB BODINE	EA
41	1	A-6867-24	1" TU SHAFT PUC, BIC, ICB BODINE	EA
42	2	C-5582	1" TAKEUP BRACKET W/PAINT	EA
43	2	C-5582B	ADJ BOLT FOR TAKE UP BRACKET 12"	EA
46	1	H40B18X1	4018 X 1" HARDENED SPROCKET DRIVEN	EA
47	2	TU250X1	TAKE-UP BEARING	EA
48	1	K5152	K5152 12' POWER CORD	EA
49	1	C-5581-12	IDLER ROLLER 12"	EA
49	1	C-5581-18	IDLER ROLLER 18"	EA
49	1	C-5581-24	IDLER ROLLER 24"	EA
50	1	KB9380C	VARI SPEED CONTROL	EA
51	1	MDL-2	FUSE 2A/250V FOR 6183 & 1060 MOTOR	EA
52	1	1060	1/4 HP DC MOTOR	EA
53	2	FB16X1	FIXED BEARING	EA
54	1	B-6820-12	1" DR SHAFT PUC, BIC, ICB BODINE	EA
54	1	B-6820-18	1" DR SHAFT PUC, BIC, ICB BODINE	EA
54	1	B-6820-24	1" DR SHAFT PUC, BIC, ICB BODINE	EA
59	1	C-6836-12	V-GD DR ROLLER ICB/BIC/PUC BODINE KNURLED	EA
59	1	C-6836-18	V-GD DR ROLLER ICB/BIC/PUC BODINE KNURLED	EA
59	1	C-6836-24	V-GD DR ROLLER ICB/BIC/PUC BODINE KNURLED	EA

# VICB CONVEYOR PARTS

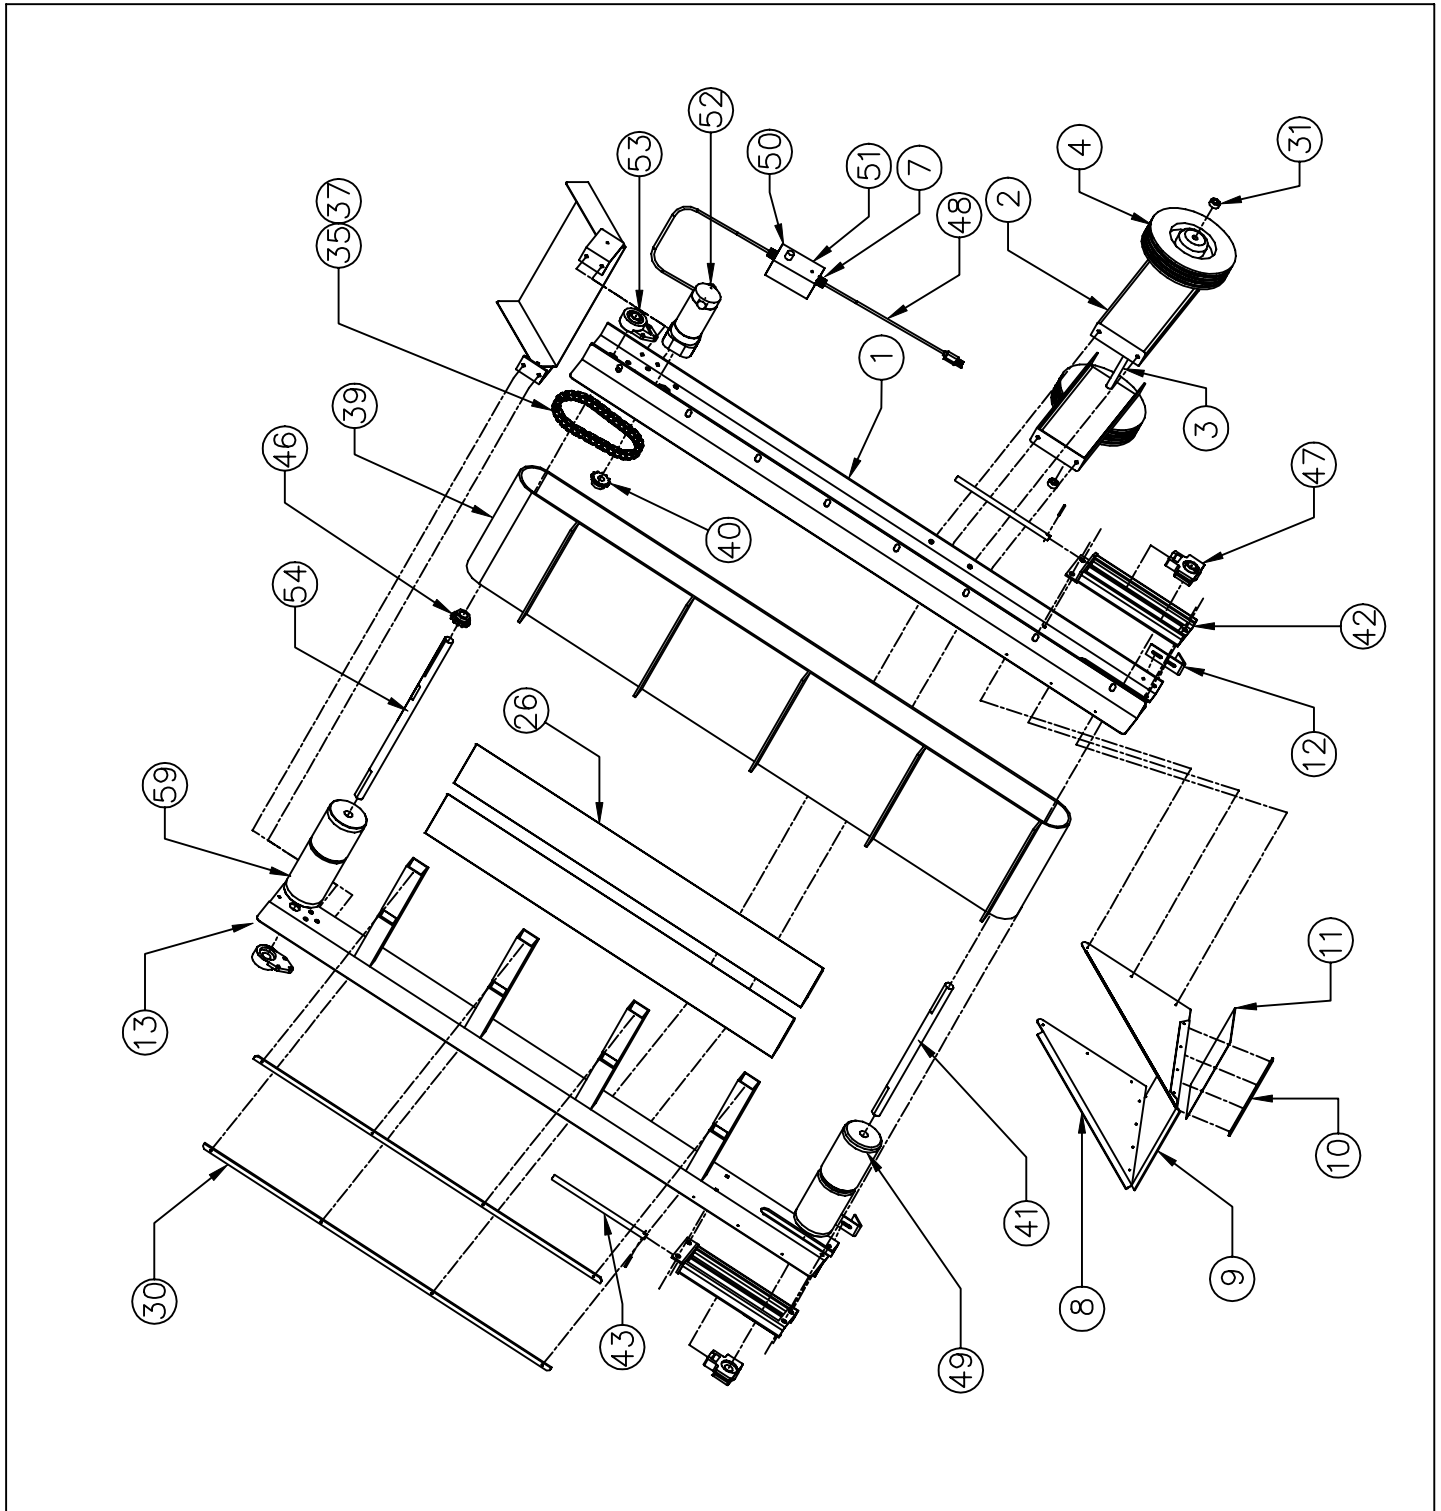

## PLASTIC PROCESS EQUIPMENT, INC.

8303 Corporate Park Drive, Macedonia (CLEVELAND), OHIO 44056  
(216) 367-7000 TOLL FREE: 800-321-0562 FAX (216) 367-7022 ORDER FAX: 800-223-8305 EMAIL: SALES@PPE.COM

6385 Montessori Street, Las Vegas, Nevada 89113  
(702) 433-6385 TOLL FREE: 800-258-8877  
FAX: (702) 433-6388

11218 Challenger Ave., Odessa, FL 33556  
(727) 834-8888 TOLL FREE: 800-282-6783  
FAX: (727) 834-8873